




Replacing connector on A90L-0001-0509

1) Using a small flat screw driver, peel back the rubber backing as shown below.

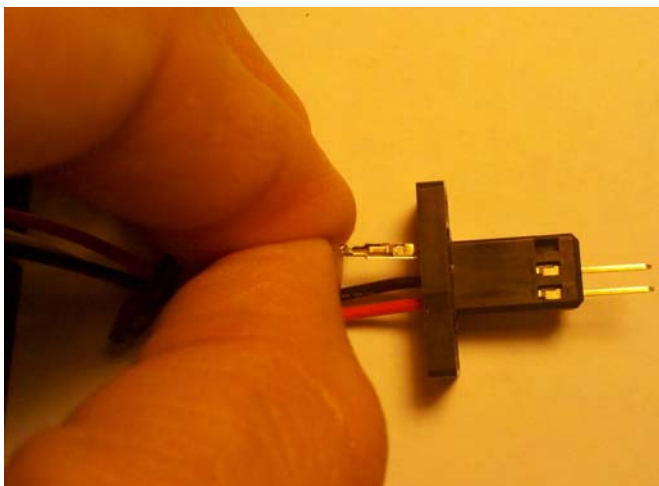

2) To remove the pins from the connector, pull out the corresponding wire while pushing down on the pin as shown below.

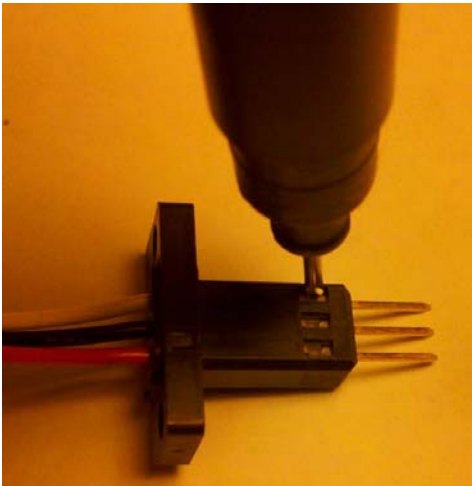

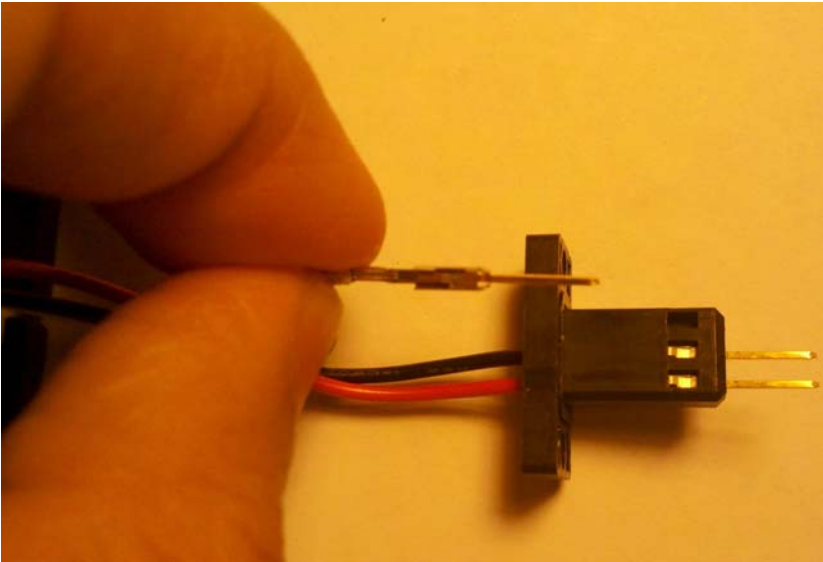

3) Insert the new wires into the connector. Pay attention to the location of each wire as shown below. Inserting the wires in wrong location can cause damage to the fan and/or the Fanuc drive unit!!

